


Nero[®]

INSTRUCTION MANUAL

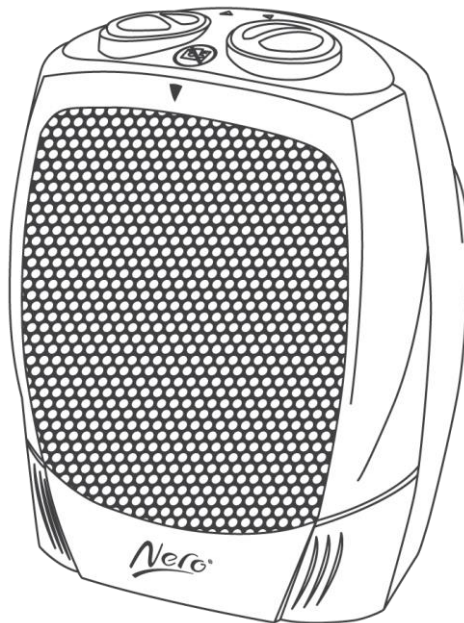

Nero Ceramic Heater Black Model: 749007

Imported By R Weatherdon & Co Pty Ltd
Sydney - Australia
www.weatherdon.com.au
Made in China

FOR YOUR OWN SAFETY

1. Read all instructions before using the ceramic fan heater.
2. Only connect the fan heater to a single-phase socket with a main voltage as specified on the rating plate.
3. This appliance meets the electromagnetic compatibility requirements specified in EN55104/95 regarding interference with radio and TV sets.
4. Do not leave your home whilst the appliance is functioning. Ensure that the switch is in the OFF (0) position and the thermostat is in minimum position. Always unplug the appliance.
5. Keep combustible material such as furniture, cushions, bedding, paper, clothes, curtains etc. at least 1 meter away from the fan heater.
6. Always unplug the heater when not in use. Do not pull the cord to unplug the heater.
7. Keep the air inlet and outlet free from objects at least at least 1 meter in front and 0.5 meter behind the heater.
8. Do not install the heater right below a socket.
9. Do not let animals or children touch or play with the fan heater. The air outlet gets hot during operation (more than 80°C or 175°F).
10. Do not cover. If covered, there is a risk of overheating.
11. Do not use this fan heater in the rooms with explosive gas or whilst using inflammable solvents, varnish, or glue.
12. If the cord of this appliance is damaged, discontinue use of this product and contact the manufacturer for further instructions.
13. Keep the fan heater clean. Do not allow any objects to enter any ventilation or exhaust opening as this may cause electric shock, fire, or damage to the heater.

INSTALLATION

The appliance requires no installation, it should be used solely as a portable appliance.
Portable appliances are not suitable for use in a bathroom.

OPERATION

- Turn the thermostat knob (left dial) in a clockwise direction until it reaches the maximum setting.
- Fan only: turn the selection knob (right dial) to Fan icon
- Heating at reduced power: turn the selection knob (right dial) to setting I (750W).
- Heating at full power: turn the selection knob (right dial) to setting II (1500W).
- Switching off: turn the selection knob (right dial) to setting 0.

REGULATING THE THERMOSTAT

When the room has reached the required temperature, turn the right thermostat knob (where included) in an anti-clockwise direction up to the point where the appliance switches off, and not beyond. The temperature fixed in this way will be automatically regulated and kept at a constant level by the thermostat.

CLEANING AND MAINTENANCE

Before cleaning always remove the plug from the electrical socket.
Clean the air inlet/outlet grilles frequently.
Never use abrasive powders or solvents.

WARNINGS

Backed by the Nero 1 Year Warranty